OPERATING INSTRUCTIONS

3

Type 1311-A | AUDIO OSCILLATOR

and

Type 1311-AU | AUDIOMETRIC OSCILLATOR

GENERAL RADIO COMPANY

D

ESC-1873-93-01

INSTRUCTION MANUAL

Type 1311-A | AUDIO OSCILLATOR

and

Type 1311-AU | AUDIOMETRIC OSCILLATOR

TABLE OF CONTENTS

Section 1 INTRODUCTION 4
1.1 Purpose 4
1.2 Description 4

Section 2 INSTALLATION 7
2.1 General 7
2.2 Rack Mounting 7
2.3 Power Input 9
2.4 Output Frequency Change 9
2.5 Environmental Considerations 9

Section 3 OPERATING PROCEDURE 10
3.1 Preparation of Use 10
3.2 Operating Procedure 10

Section 4 PRINCIPLES OF OPERATION 13
4.1 General 13
4.2 Circuit Description 13

Section 5 SERVICE AND MAINTENANCE 16
5.1 Warranty 16
5.2 Service 16
5.3 Minimum Performance Standards 16
5.4 Input Power 16
5.5 Removal of Cover 18
5.6 Trouble Analysis 18
5.7 Removal and Replacement 19
5.8 Internal Adjustments 20
5.9 AC Power Conversion 20

Form No. 1311-0100-D
March, 1967

Copyright 1963 by General Radio Company
West Concord, Massachusetts, USA

GENERAL RADIO COMPANY
WEST CONCORD, MASSACHUSETTS, USA

SPECIFICATIONS

FREQUENCY

Range: Type 1311-A – 11 fixed frequencies from 50 to 10,000 Hz.
Type 1311-AU – 12 fixed frequencies from 125 to 8,000 Hz.

Control: Type 1311-A – 50, 60, 100, 120, 200, 400, 500, 1000, 2000, 5000, 10,000 Hz selected by rotary switch. A vernier provides a ±2% adjustment about nominal.

Type 1311-AU – 125, 250, 400, 500, 750, 1000, 1500, 2000, 3000, 4000, 6000, 8000 Hz selected by rotary switch. A vernier provides a ±2% adjustment about nominal.

Accuracy: ±1%, vernier at 0.

OUTPUT

Power: 1w into matched load. (Taps provide at least 0.5w output into any resistive load between 80mΩ and 8 k).

Voltage: Continuously adjustable from 0 to 1, 3, 10, 30, or 100, open circuit.

Current: Continuously adjustable from 0 to 40, 130, 400, 1300, 4000 ma, short circuit (approx).

Impedance: Between one and two times matched load, depending on control setting. Isolated from ground; hence, can be used to drive balanced circuits.

Stability (Typical after warmup): Amplitude, long term, better than 1%; short term, better than 0.01%. Frequency, long term, better than 0.1%.

DISTORTION AND NOISE LEVEL

Distortion: Less than 0.5% under any load condition. Typically less than 0.1% over most of range. Oscillator will drive short circuit without waveform clipping.

AC Hum: Typically less than 0.003% of output voltage.

GENERAL

Synchronization: A locking voltage from an external reference frequency can be introduced at a telephone jack. Locking range is approximately ±3% for 1-volt reference signal.

Terminals: Jack-top Type 938 Binding Posts with standard ¾-inch spacing. Separate ground terminals holds Type 938-L Shorting Link which can be used to ground adjacent OUTPUT binding posts.

Power Input: 105 to 125 (or 210 to 250) v, 50 to 400 Hz. Total power consumption varies between 7 and 22 watts, depending on load.

Mounting: Aluminum panel and cabinet, in grey-crackle finish, for rack or bench use.

Accessories Supplied: Type CAP-22 Power Cord, spare fuses.

Accessories Available: Type 480-P308 Adaptor Plate Set to permit mounting in standard 19-inch relay rack (Panel height 5¼ inches).

Dimensions: Width 8, height 6, depth 7¾ inches (205 by 155 by 200 mm) over-all.

Net Weight: 6 pounds (2.8 kg). **U.S. Patent No. 2,751,549**

For a more complete description, see *GENERAL RADIO EXPERIMENTER*, 36, 8 and 9, August-September, 1962.

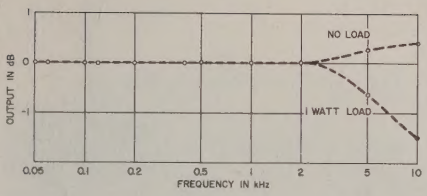

Figure A. Output of Type 1311 as a function of frequency, loaded and unloaded (typical).

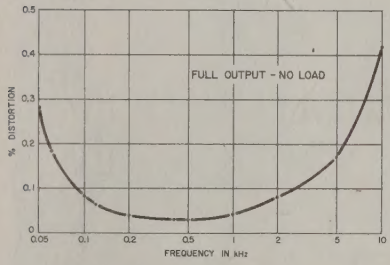

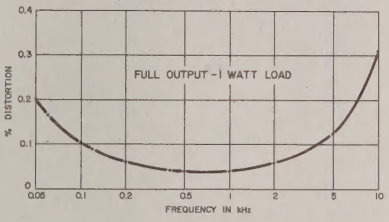

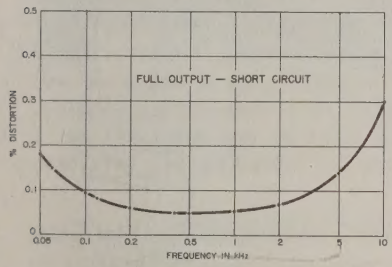

Figure B. Distortion characteristics of Type 1311 as functions of frequency and load (typical).

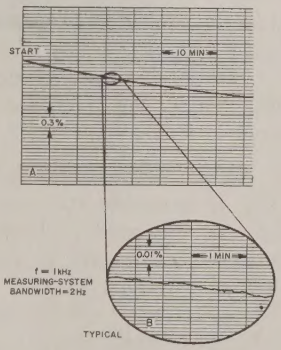

Figure C. Typical output amplitude stability of the oscillator, showing warmup drift (A) and short-term variation (B).

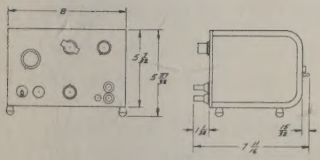

Figure D. Dimensions of the Type 1311.

SECTION 1

INTRODUCTION

1.1 PURPOSE.

1.1.1 GENERAL. The Type 1311 oscillators are complete, compact, and self-contained audio-frequency sources. The Type 1311-A (Figure 1-1) is intended for general laboratory use, and is particularly well suited for use in audio-frequency bridge measurements. Each oscillator produces an essentially pure sinusoidal output, stable in amplitude and frequency, over a wide range of load impedances, at selected frequencies. The Type 1311-A has eleven fixed frequencies and provision for a twelfth, which the user can readily add by installing two precision resistors.

1.1.2 THE TYPE 1311-AU AUDIOMETRIC OSCILLATOR. The Type 1311-AU is primarily intended to be used for calibration and testing of audiometric equipment. It will be especially useful for calibration of audiometric earphones, in conjunction with the Types 1551 and 1565 Sound Level Meters, (or the Type 1564 Sound and Vibration Analyzer), The Type 1560-P5 or -P6 (or the Type 1560-P3 or -P4) Piezoelectric Ceramic Microphone, and the Type 1560-P82 (or -P81) Earphone Coupler. The frequencies available from the Type 1311-AU include all those commonly used as audiometric test frequencies. The difference in output frequencies is the only characteristic in which the Type 1311-AU is unlike the Type 1311-A, and all instructions and descriptions supplied for the Type 1311-A are applicable to the Type 1311-AU unless specifically stated otherwise.

1.2 DESCRIPTION.

1.2.1 GENERAL. The Type 1311 is a transistorized RC Oscillator, which makes extensive use of negative feedback to attain amplitude and frequency stability of a high order, as well as long-term reliability. The

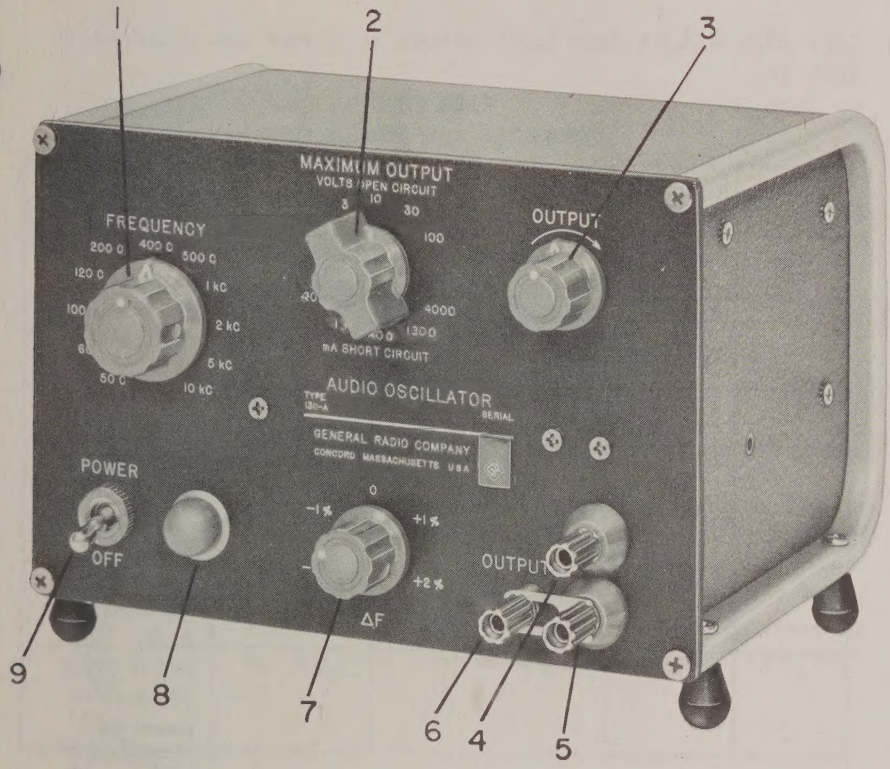

Figure 1-1. Type 1311-A Audio Oscillator.

output system uses a multitap shielded transformer capable of matching impedances from 0.25 to 2500 ohms. It is well isolated from the oscillator circuitry to provide a distortion-free waveform to any impedance, including a short circuit.

The instrument is ac powered and uses a regulated solid-state power-supply circuit to provide stable dc to all stages over a wide range of power demands. Operation at ac inputs of 115 or 230 volts can be achieved by selection of appropriate taps on the input winding of the primary power transformer.

The Type 1311 is designed for bench use but can conveniently and inexpensively be altered for rack mounting by the addition of the General Radio Type 480-P308 Adaptor Plate Set (Catalog No.0480-9638).

1.2.2 CONTROLS. Front panel controls are listed and described in Table 1-1.

TABLE 1-1
CONTROLS AND INDICATORS

Ref (Fig. 1-1)	Ref Desig	Name	Type	Function
1	S101	FREQUENCY	12-position rotary switch	Selects output frequency.
2	S102	MAXIMUM OUTPUT	5-position rotary switch	Selects output transformer tap.
3	R139	OUTPUT	Linear potentiometer	Adjusts output level.
7	R138	△ F	Linear potentiometer	Adjusts output frequency ±2% about nominal.
9	S501	POWER	Toggle switch	Turns instrument on or off.
8	P501	None	Light	Glows when primary power on.

1.2.3 CONNECTORS. Connectors provided on the Type 1311 are listed and described in Table 1-2.

TABLE 1-2
CONNECTORS

Ref (Fig. 1-1)	Ref Desig	Name	Type	Function
4-6	J101 thru J103	OUTPUT	Jack-top binding posts (GR Type 938)	Output terminals and ground.
	PL501	None	3-prong plug (GR Type 109-A)	Power input terminal.
	J104	None	Telephone	External Sync input

SECTION 2

INSTALLATION

2.1 GENERAL.

The Type 1311-A Audio Oscillator, as supplied, is intended for independent bench use. However, it may be adapted to rack mounting, either independently or in combination with a similarly sized instrument, such as the General Radio Type 1232-A, -AP Tuned Amplifier and Null Detector. This assembly, Type 1240-A, -AP Bridge Oscillator-Detector is convenient for use with audio-frequency bridges and other null-balance devices.

2.2 RACK MOUNTING.

2.2.1 RACK CONVERTING THE TYPE 1311. The Type 1311 Oscillator can be rack-mounted by itself in a standard 19-inch relay rack by means of Relay Rack Adaptor Set, Catalog Number 0480-9638, or with another convertible-bench instrument by means of Relay Rack Adaptor Set, Catalog Number 0480-9636. To attach the adaptor sets, proceed as follows (see Figure 2-1):

a. Remove the rubber feet, if necessary to clear an instrument below.

b. Remove the screws that secure the front panel to the aluminum end frames.

c. Remove the spacers between the front panel and the end frames. If two instruments are to be mounted side by side, join them as follows: (otherwise proceed to step f):

d. On one instrument, install clips with the front-panel screws removed earlier. Remove the cover of this instrument and thread the nylon screw through the hole in the side panel on the same side as the clips.

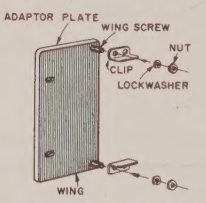

Figure 2-1a. Rack adapting the Type 1311.

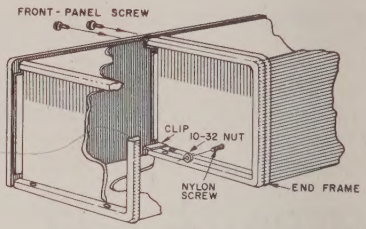

Figure 2-1b. The Type 1240.

e. Secure the two instruments together with front-panel screws through the remaining hole in each clip. Remove the cover of the second instrument, thread the nut onto the nylon screw, and tighten. Note that the instruments can be bench-mounted side by side in this manner. Simply do not remove the two feet from each outside end frame and do not install the adaptor plates..

f. Install two clips on each adaptor plate with the wing screws, lockwashers, and nuts supplied.

g. Attach the adaptor plates to the instrument with the front-panel screws removed earlier.

h. Mount the assembly in the rack with the 10-32 screws supplied.

2.2.2 MOUNTING THE TYPE 1620-A, -AP. The Type 1311 Oscillator is an integral part of the Type 1620-A, -AP Capacitance-Measuring Assembly. To assemble the Type 1620-AP follow the instructions in the instruction sheet supplied with the Type 1232-P2 Preamplifier. Then assemble the Type 1620-A, proceed as follows (see Figure 2-2):

a. Follow steps a through e in paragraph 2.2.1.

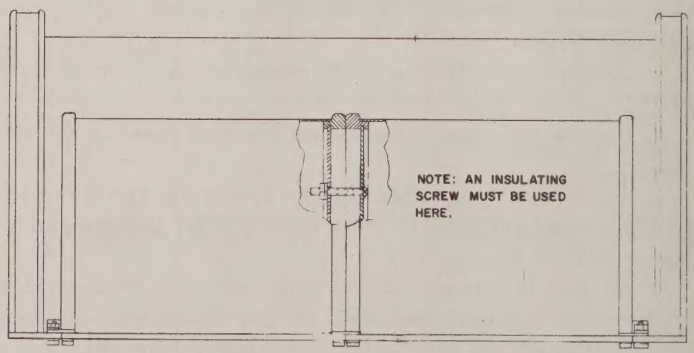

Figure 2-2. The Type 1620, top view.

b. Insert the "ears" of the mounting plates included in the Type 1620-A hardware set in the spaces between the front panels and the end frames of the Type 1311 and Type 1232.

c. Replace all remaining front panel screws.

d. Insert panel screws (those with the black cup washers) through the holes of the rack adaptor panels and through the mounting plates into the U-shaped end frames supplied with the Type 1620-A hardware set.

e. Stack mount the assembled instruments with the Type 1615 according to the instructions in the Type 1615 instruction manual.

2.3 POWER INPUT.

2.3.1 NORMAL OPERATION. The Type CAP-22 Three-Wire Power Cord (catalog number 4200-9622) supplied should be attached to PL501 on the rear panel and plugged into a standard grounding-type power receptacle providing 105-125 volts at 50 to 400 Hz.

2.3.2 HIGHER VOLTAGE. The instrument may be operated at ac inputs from 210 to 250 volts, provided that minor wiring and fuse changes described in Section 5 have been performed.

2.4 OUTPUT FREQUENCY CHANGE.

To add a 12th audio output frequency (Type 1311-A only), or to change any of the existing fixed frequencies, resistor pairs in the Wein-bridge circuit may be installed, or replaced, as described in Section 5.

2.5 ENVIRONMENTAL CONSIDERATIONS.

2.5.1 TEMPERATURE. The Type 1311 will operate within specifications over an ambient temperature range of 0 to 50 C. It is not affected by humidity.

2.5.2 EXTERNAL FIELDS. Since the Type 1311-A is often mounted with the sensitive Type 1232-A Null Detector, stray magnetic and electrostatic fields should be kept to a minimum by suitable shielding, and orientation of signal leads. A wire loop is included (internally) near the output terminals to cancel the magnetic field resulting from the ¾-inch spacing of the output terminals, and will prevent magnetic pickup in the adjacent null detector, even at high current levels, if a General Radio Type 274-MB Shielded Output Cable is used. Alternatively, the Type 1311-A can be mounted at the right-hand side of the Type 1232-A, to place the output circuit as far as possible from the detector input terminals.

SECTION 3

OPERATING PROCEDURE

3.1 PREPARATION FOR USE.

3.1.1 POWER CONNECTIONS. Connect the Type 1311 to a suitable source of power as indicated on the plate above the power receptacle on the rear panel. A three-wire power cord (Type CAP-22) is supplied.

3.1.2 GROUNDING. The instrument should normally be operated with the chassis grounded through the three-wire power cord. If the cord is not used, make the ground connection at J103 (6, Figure 1-1) on the front panel, if required.

3.1.3 OUTPUT CONNECTION. Take the oscillator output from the jack-top binding post pair J101 - J102 (4 and 5, Figure 1-1). J101 is always used above ground, but J102 may be grounded or ungrounded, depending on the requirements of the test setup in use. A captive shorting-link affixed to J103 may be attached to J102, if it is desired to work one side of the output against ground. However, if ground loops pose a problem, disconnect the shorting link from J102 to achieve a completely isolated "floating" output.

3.1.4 OUTPUT-SHIELDING ACCESSORIES. In applications in which stray pickup is apt to be troublesome, use of a shielded patch cord is suggested. The General Radio Type 274-NL Patch Cord, a polarized 3-foot shielded cable with a shielded double plug at each end, is available for this purpose.

3.2 OPERATING PROCEDURE.

3.2.1 TURN-ON. Place the POWER switch (9, Figure 1-1) in up position; the lamp immediately to the right should glow.

NOTE

No extensive warm-up time is required; a few seconds is sufficient.

3.2.2 FREQUENCY SELECTION. Set the FREQUENCY switch (1, Figure 1-1) to the desired frequency. Use the ΔF control (7, Figure 1-1) to adjust the selected frequency over a range of approximately ±2% of nominal. The frequency of the output waveform is within ±1% of the panel

engraving, with the ΔF control set at 0. For greater precision monitor the output with a frequency meter, such as the General Radio Type 1150 Digital Frequency Meter.

3.2.3 POWER SELECTION. Set the MAXIMUM OUTPUT switch (2, Figure 1-1) to a value in volts or milliamperes (as engraved on the front panel) that is slightly greater than the amplitude of the voltage or current desired. Then, rotate the OUTPUT control (3, Figure 1-1) to make the fine adjustment. The OUTPUT control sets the output at zero in its fully counterclockwise position, and rotated to its fully clockwise position provides a continuous linear increase up to the value of the MAXIMUM OUTPUT control setting.

The maximum power output is approximately 1.1 watt, so that bridges with 1-watt ratio arms, such as most General Radio bridges, cannot be damaged by overload. At least 0.58 watt of signal power can be supplied to any load between 80 milliohms and 8 kilohms, with the appropriate setting of the output switch. See Figure 3-1 for a plot of these values.

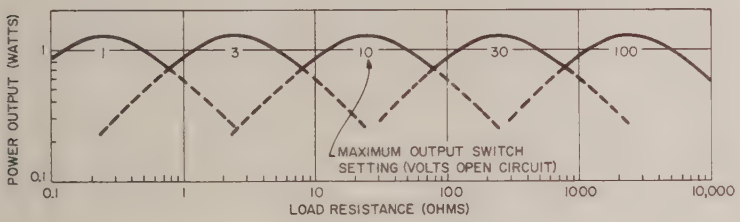

Figure 3-1. Typical power output as a function of load resistance.

3.2.4 IMPEDANCE MATCHING. Any setting of the output controls can be used with any load impedance without overloading the oscillator circuits. Even with a short circuit across the output terminals, the oscillator will still supply a sinusoidal current of the value indicated by the MAXIMUM OUTPUT control. This feature is particularly convenient when the oscillator is used as a source for ac bridge measurements, since it means that the output controls can be set to any position, and the waveform will not be distorted by mismatching.

The output winding is shielded from the oscillator circuits and may be used ungrounded, or grounded at a remote point. The latter procedure

is recommended when the oscillator is used in bridge measurements, to eliminate circulating ground currents, which can cause errors.

The nominal source resistance is a function of the transformer tap selected by the MAXIMUM OUTPUT control setting and the position of the OUTPUT control. Figure 3-2 shows the relationship.

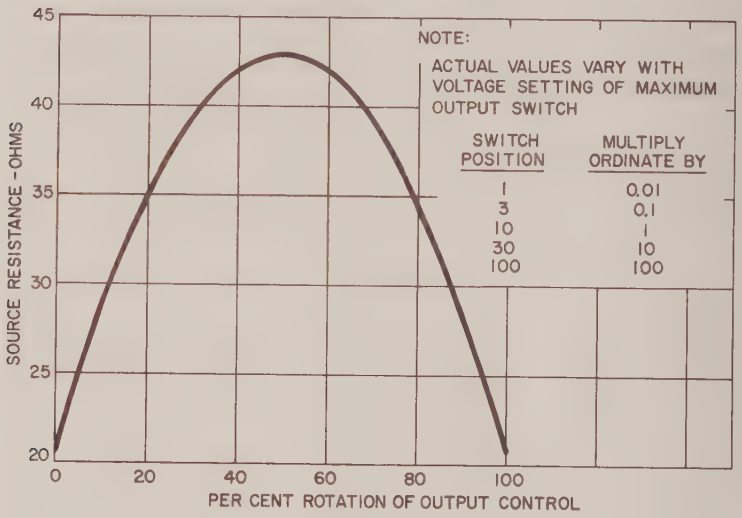

Figure 3-2. Source resistance as a function of output control settings.

3.2.5 FREQUENCY SYNCHRONIZATION. A telephone jack (J104) on the left side wall of the cabinet is provided to permit injection of an external standard frequency to control the output frequency of the Type 1311-A. This is particularly useful to drive the Type 1615-A Capacitance Bridge when making precise measurements of frequency-sensitive parameters such as dissipation factor. A 1-volt signal will result in a locking range of approximately ±5%. For larger synchronizing signals, a resistor should be added in series with the signal lead. Use the following equation to calculate the value of the resistor required.

$$R \text{ (in kilohms)} \approx 5 \text{ (Sync Volts - 1)}$$

The dc voltage on the reference signal should not exceed +50 volts. The General Radio Type 1115 Standard-Frequency Oscillator can be used with the addition of this resistor.

SECTION 4

PRINCIPLES OF OPERATION

4.1 GENERAL.

The Type 1311-A Audio Oscillator uses a Wien-type network and a closed-loop, transistor-amplifier circuit to obtain a stable yet inexpensive signal source which will satisfy many oscillator requirements in the audio-frequency spectrum. See Figure 4-1 for a simplified diagram and Figure 5-2 for the complete schematic.

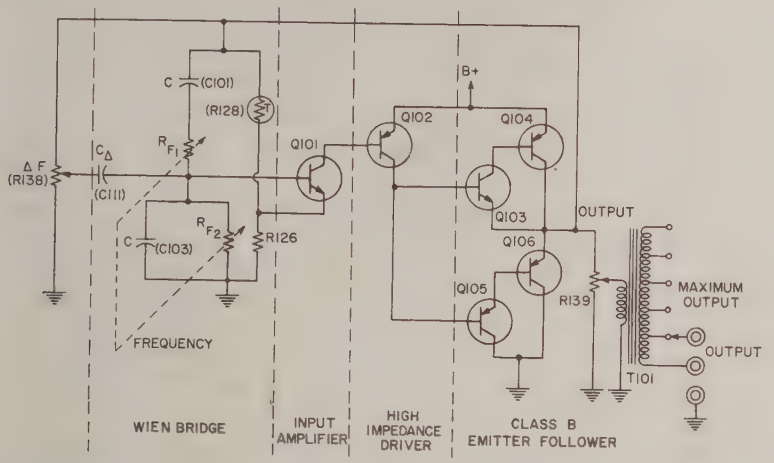

Figure 4-1. Simplified schematic diagram.

4.2 CIRCUIT DESCRIPTION.

4.2.1 FREQUENCY-DETERMINING NETWORK. The Wien-bridge circuit can be thought of as consisting of two parts: a frequency-determining network (C101, C103 and paired resistors R_{F1}.R_{F2}), which provides positive feedback to sustain oscillation, and a resistive divider (R128 and R126) which provides negative feedback to stabilize amplitude.*

* For a detailed dicussion of this design feature, see Fulks, R. G., "Novel Feedback Loop Stabilizes Audio Oscillator," ELECTRONICS, Vol. 36 No. 5 February, 1963. Available as General Radio reprint A-107.

The frequency-determining network has a transfer function:

$$\frac{e_{OUT}}{e_{IN}} = \frac{RCs}{1 + 3RCs + R^2C^2s^2}$$

where $s = j2\pi f$
$R = R_{F1} = R_{F2}$
$C = C101 = C103$

At some oscillator frequency, f_o, this function equals +1/3. The frequency is determined by any of 11 pairs of precision metal-film resistors, R_{F1}, R_{F2}, selected by the FREQUENCY switch. With this circuit, frequency can be adjusted over a 200-to-1 range simply by changes in resistors. The frequency vernier adjustment, ΔF, is potentiometer R138, which controls the signal voltage on $C\Delta$ (C111), one of the capacitors in the network.

The resistive divider is used to set the gain of the associated amplifier chain to +3. The net loop gain is then +1 and the circuit oscillates at the frequency f_o.

A small bead thermistor, R128, automatically adjusts its resistance to the value needed to maintain oscillations. Its time constant is short enough to provide rapid correction for amplitude variations, yet long enough to cause little distortion at the lower frequencies. It operates at a high temperature, in an evacuated bulb, to minimize the effects of ambient temperature. This thermistor, used with the high-stability, low-noise amplifier described below, results in an oscillator with amplitude (modulation) noise typically less than 0.01% rms.

4.2.2 AMPLIFIER. The amplifier uses six transistors in a single, direct-coupled feedback loop. The input circuit is chosen for low-noise performance. Transistor Q102 provides a high-impedance drive for the class-B output stage, and achieves a minimum of crossover distortion, yet does not require complicated, temperature-sensitive biasing networks. Negative feedback is used to obtain a transfer characteristic which is substantially independent of transistor characteristics, resulting in excellent stability, low distortion, and long-term reliability. Components R132, C107, and C108 comprise a phase-compensation network used to maintain high-frequency stability in view of the large amount of negative feedback involved.

The input impedance of the amplifier is approximately 10 megohms. The output impedance is approximately 0.005 ohm, so that changes in load have very little effect on the oscillator.

4.2.3 OUTPUT TRANSFORMER. The winding resistance of the output transformer, T101, isolates the oscillator from the load and ensures that the output waveform will not be clipped under any load condition. The output winding is tapped to provide five switch-selectable, output-voltage ranges to match a wide variety of load requirements. The output winding is doubly shielded from the oscillator circuits for isolation, when the output is used off ground (floating). A simplified schematic diagram of the output circuit is shown in Figure 4-2.

The second shield is used to minimize possible current flow through the distributed capacitance, C_{FL} ($\approx$500pf), thence through an external circuit ground. The resulting floating potential, E_{FL}, of the output winding is less than 0.25 volt.

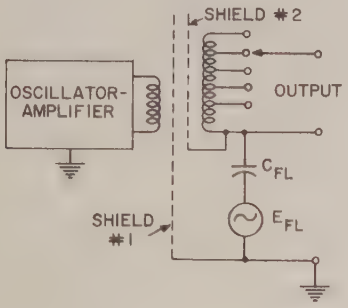

Figure 4-2. Simplified schematic diagram of output circuit.

4.2.4 POWER SUPPLY. Power transformer, T501, is used to apply 25.5 v ac to a silicon-diode bridge-rectifier and filter circuit. The filtered dc output passes through a simple regulator circuit, made up of Q501, Q502, and CR505, a zener diode. The supply provides a low-impedance, ripple-free, 20-v dc source to power the oscillator circuitry. The hum level of the oscillator output is typically 90 db below rated output signal value.

SECTION 5

SERVICE AND MAINTENANCE

5.1 WARRANTY.

We warrant that each new instrument sold and manufactured by us is free from defects in material and workmanship, and that, properly used, it will perform in full accordance with applicable specifications for a period of two years after original shipment. Any instrument or component that is found within the two-year period not to meet these standards after examination by our factory, Sales Engineering Office, or authorized repair agency personnel, will be repaired, or, at our option, replaced without charge, for tubes or batteries that have given normal service.

5.2 SERVICE.

The two-year warranty stated above attests the quality of materials and workmanship in our products. When difficulties do occur, our service engineers will assist in any way possible. If the difficulty cannot be eliminated by use of the following service instructions, please write or phone our Service Department (see rear cover), giving full information of the trouble, and of steps taken to remedy it. Be sure to mention the serial and type numbers of the instrument.

Before returning an instrument to General Radio for service, please write to our Service Department or nearest Sales Engineering Office, requesting a Returned Material Tag. Use of this tag will ensure proper handling and identification. For instruments not covered by the warranty, a purchase order should be forwarded to avoid unnecessary delay.

5.3 MINIMUM PERFORMANCE STANDARDS.

The Type 1311 in normal operation should perform within the standards described in Table 5-1. Table 5-2 lists the test equipment required to check minimum performance. If the instrument does not meet minimum performance standards, refer to paragraph 5.6 for trouble analysis procedures.

5.4 INPUT POWER.

The input power at 115/230 volts 60 Hz normally should not exceed 7 watts no load and 22 watts with the terminals short-circuited and the OUTPUT control fully clockwise.

TABLE 5-1
MINIMUM PERFORMANCE STANDARDS FOR TYPE 1311-A, -AU

TEST	FREQUENCY SWITCH POSITION	MAXIMUM OUTPUT SWITCH POSITION	OUTPUT CONTROL POSITION	ΔF POSITION	LOAD	NORMAL INDICATION	IF INDICATION ABNORMAL
Frequency Accuracy	All	10 v	cw stop	0	None	Using frequency counter or meter, check that the frequency is within ±1% of nominal value.	Refer to para 5.6.
Δf Control	1 kHz	10 v	cw stop	-2%, 0, +2%	None	Using frequency counter or meter, check that frequency change is approximately plus and minus 2%.	Refer to para 5.6.
Output Voltage	1 kHz	All	cw stop	0	None	Using VTVM, check that output voltage is greater than that indicated by MAXIMUM OUTPUT Control.	Adjust by means of R129 (para 5.8.1).
Output Voltage	All	10 v	cw stop	0	None	Using VTVM, check that output voltage is greater than 10 volts.	Adjust by means of R129 (para 5.8.1).
OUTPUT Control	1 kHz	10 v		0	None	Using VTVM, check that output voltage can be adjusted by OUTPUT Control from 0 to 10 v.	Refer to para 5.6.
Output Power	1 kHz	10 v	cw stop	0	Power Output Meter	Using Power Output Meter, check that output power is greater than 1.0 watt into some impedance near 25 Ω.	Adjust by means of R129 (para 5.8.1).
Output Distortion	50 Hz* 1 kHz 10 kHz	10 v	cw stop	0	(None) (25 Ω) (1 Ω)	Using Distortion Meter, check that distortion is less than 0.5%.	Refer to para 5.6.
Synchronization	1 kHz	10 v	cw stop	0	None	Apply 1-v, 1-kHz signal to J104. With oscilloscope at OUTPUT, vary ext.-oscillator freq. Type 1311 should remain locked over a 5% range (approx)	Refer to para 5.6.

**125Hz for the Type 1311-AU.*

TABLE 5-2
TEST EQUIPMENT REQUIRED

Description	Recommended GR Type Numbers*
Frequency Counter or Meter	1150-A, 1151-A, 1153-A, 1153-A,
Vacuum Tube Voltmeter	1806-A
Distortion and Noise Meter or Wave Analyzer	1932-A, or 1900-A
Output-Power Meter	1840-A
Variable-Frequency Audio Oscillator	1304-B, 1310-A
Oscilloscope	Laboratory quality, min bandwidth 1 kHz, min vert sensitivity 5 v/cm
Multimeter	Sensitivity 20,000 ohms/v

*Or equivalent

5.5 REMOVAL OF COVER.

To remove the cover, loosen the two captive thumb screws on the rear of the case and pull straight back.

5.6 TROUBLE ANALYSIS.

Perform the following procedures to isolate defects causing instrument malfunction as indicated by paragraphs 5.3 and 5.4. See Figures 5-1 through 5-5 for circuit function and part location.

a. Disconnect primary power and remove cover.

b. Check fuses F501 and F502; replace if defective.

c. Visually check detail parts inside instrument for obvious defects, such as broken leads or charred surfaces. Repair or replace, as necessary.

d. Reapply primary power and, with multimeter, check for 25 v ac across anchor terminals AT501 and AT502.

CAUTION

Semiconductor elements can be damaged by transients resulting from the insertion of instrument probes. Always turn off the power before connecting any test equipment to other than the output terminals. Restore power when connection is made.

e. Switch multimeter to dc scale and check voltages as indicated on Figure 5-2. For accessibility of test points on etched-circuit board, see Figure 5-5.

NOTE

Complete circuit is enclosed in a single dc feedback loop, so that failure of one component will probably cause all voltages to differ considerably from the values shown.

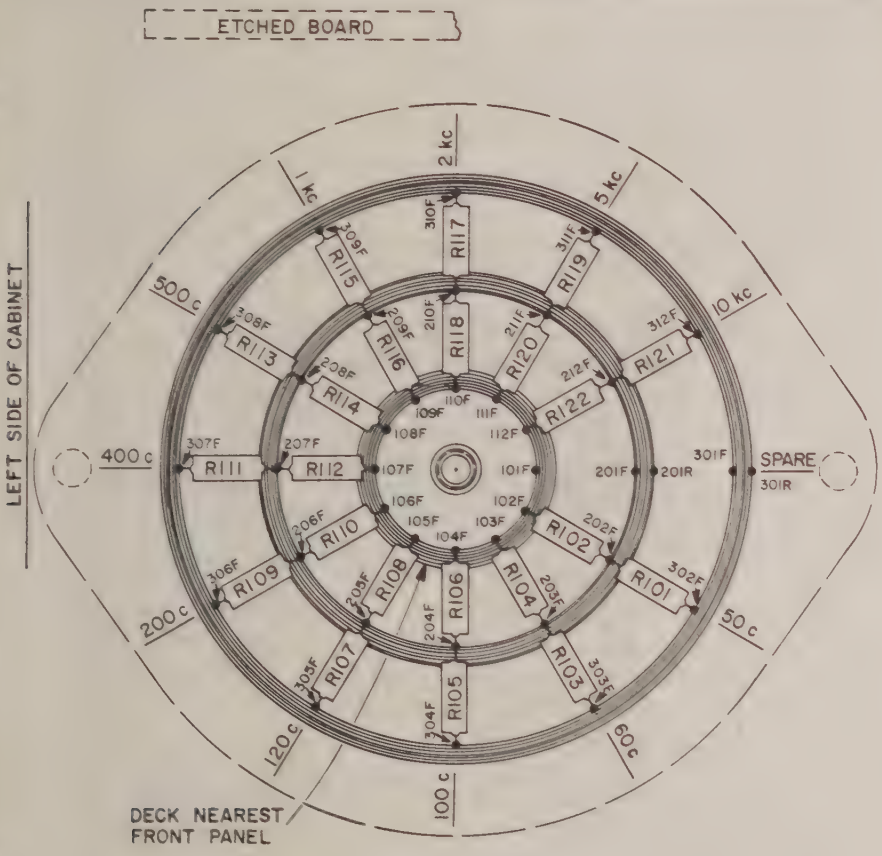

Figure 5-1a. Wiring diagram for FREQUENCY switch S101 on the Type 1311-A.

5.7 REMOVAL AND REPLACEMENT.

5.7.1 GENERAL. Faulty parts should be removed and replaced by units meeting the description given in the Parts List at the end of this section.

5.7.2 SEMICONDUCTORS. Since the expected life of the semiconductor elements in the Type 1311 is comparable to that of other components, they are soldered into the circuit boards. As a general rule, it is much safer to determine the faulty semiconductors from over-all circuit test, rather than to remove them individually for testing.

CAUTION

Transistors are easily damaged by excessive heat; exercise care when unsoldering them.

5.7.3 PILOT LIGHT. The pilot light (P501) is operated well below its rated voltage. If a change is required, unscrew the red cap from the front of the panel and replace the light with a Mazda # 44.

5.8 INTERNAL ADJUSTMENTS. (See Figures 5-2 through 5-5.)

5.8.1 OSCILLATOR LEVEL. R129, a secondary control used to adjust oscillator power level, is a screw-driver-adjustable potentiometer mounted on the underside of the etched circuit at its inside edge. With the dust cover removed, it is accessible from the bottom of the instrument.

R129 should be set so that the no-load output voltage, as indicated by a VTVM across the OUTPUT terminals, is approximately 5% higher than the value indicated by the MAXIMUM OUTPUT switch, when the OUTPUT control is turned fully clockwise.

5.8.2 OSCILLATOR FREQUENCY. Any frequency between 50 hertz and 10 kHz can be added to those provided on the Type 1311-A, by the installation of two precision resistors, R_F, whose values can be determined from the following relation:

$$R_F = 1.61 \times 10^3 \frac{(1\ \text{kHz})}{(f_{\text{kHz}})}$$

To utilize the twelfth position of the FREQUENCY selector switch, first calculate the value of the resistors required. For example, if a 600-Hz output is wanted, then

$$R_F = 1.61 \times 10^3 \frac{(1000)}{(0.6)} = 2.66 \text{ kilohms.}$$

The resistors must be mounted on the FREQUENCY switch (S101). An unused position (between the 50-Hz and 10-kHz positions) is provided for this purpose. Before installing the resistors on S101, remove the jumper between contacts 101F and 201F. The contacts 101F, 201F, and 301F may be reached from the bottom of the instrument. See Figure 5-1a for switch details. All twelve switch positions are used on the Type 1311-AU. These are shown in Figure 5-1b.

5.9 AC POWER CONVERSION.

5.9.1 GENERAL. The Type 1311 is available from the factory wired either for use with inputs of 105 to 125 or 210 to 250, 50 to 400 Hz. However, if the user wishes to convert the instrument from one power option

to the other, it is necessary merely to change wiring to the power-transformer input winding from power switch S501 and replace fuses.

WARNING

Pull the power cord from the receptacle before performing the following procedures.

5.9.2 TRANSFORMER WIRING. Remove the dust cover and place the instrument upside down on the bench. The input transformer (T501) is mounted on the side wall.

For 115-volt operation, transformer leads 1 and 3 should connect to lug 5 on S501 and leads 2 and 4 to lug 6 on S501. For 230-volt operation, lead 1 connects to lug 5, lead 4 to lug 6, and leads 2 and 3 are joined at anchor terminal AT506.

5.9.3 FUSES. Two fuses (F501 and F502), mounted on the inside of the vertical panel at the top rear, protect the instrument from electrical overload. They are accessible from the bottom, also. For 115 v, use 0.25-amp fuses; and for 230 v, use 0.125-amp fuses.

Figure 5-1b. Wiring diagram for FREQUENCY switch S101 on the Type 1311-AU.

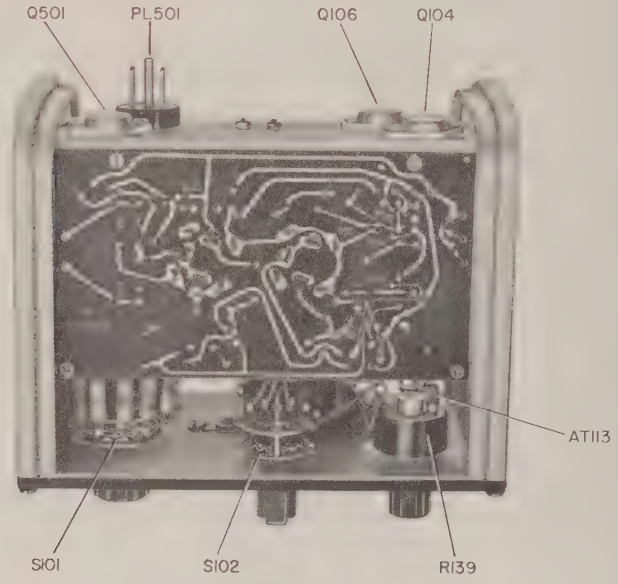

Figure 5-3. Top rear interior view.

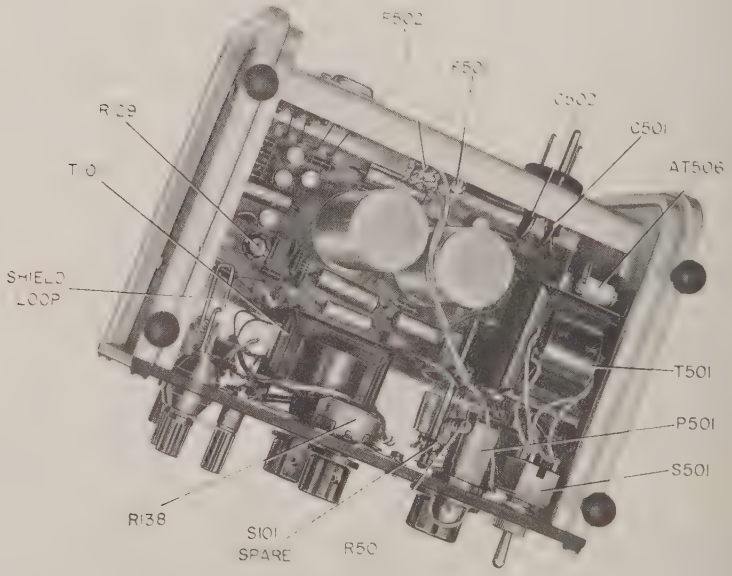

Figure 5-4. Bottom rear interior view.

NOTE: RESISTORS 1/2 WATT UNLESS OTHERWISE SPECIFIED
RESISTORS IN OHMS UNLESS OTHERWISE SPECIFIED
M= 1 MEGOHM K=1000 OHMS
CAPACITANCE VALUES: ONE AND OVER IN PICOFARDS
LESS THAN ONE IN MICROFARADS
UNLESS OTHERWISE SPECIFIED
* NOT USED IN SOME INSTRUMENTS
⊘ SCREWDRIVER ADJUSTMENT
○ KNOB CONTROL

FOR 1311-AU

FREQUENCY

750Hz 1kHz .5kHz 500Hz 2kHz 400Hz S101 3kHz 250Hz 4kHz 125Hz 6kHz 8kHz

FOR 1311

FREQUENCY

200Hz 400Hz 500Hz 120Hz 1kHz 100Hz S101 2kHz 60Hz 5kHz 50Hz 10kHz

MAXIMUM OUTPUT OPEN CIRCUIT / SHORT CIRCUIT 1 4000 3 1200 10 400 30 130 100 V 40 ma

S102

POWER OFF ON

F501 T501 AT501 BR

C501 0.0033 CR501 CR502 AT503 Q50

PL501 S501 AT506 25.5 V. AC CR503 CR504 +34V

C502 0.0033 P501 BL R502 47 AT504

6.3 V. AC R501 6.8 2W

C503A,B 675 μF R503 2.2K

F502 GN AT502

FOR T501 CONNECTIONS:
115V OPERATION CONNECT #1 & #3
TO S501, #5 & #2, & #4 TO S501, #6
230V. OPERATION CONNECT #2 & #3
TO AT506

FOR 1311

FREQUENCY

50Hz 60Hz 100Hz 120Hz 200Hz 400Hz 500Hz 1kHz 2kHz 5kHz 10kHz

301F 302F 303F 304F 305F 306F 307F 308F 309F 310F 311F 312F

R101 32.1K R103 26.8K R105 16.1K R107 13.4K R109 8.03K R111 4.01K R113 3.21K R115 1.61K R117 803 R119 321 R121 161

201F 202F 203F 204F 205F 206F 207F 208F 209F 210F 211F 212F

R102 32.1K R104 26.8K R106 16.1K R108 13.4K R110 8.03K R112 4.01K R114 3.21K R116 1.61K R118 803 R120 321 R122 161

101F 102F 103F 104F 105F 106F 107F 108F 109F 110F 111F 112F

C101 0.1 AT101 S101, 301R R123 11K C106 * .0022 S101, 201R AT103

S101

201F 201R 301F 301R

SECTION 2 FRONT REAR SECTION 3 FRONT REAR

C102 100 μF

AT101 S101, 301R R124 10K C106 * .0022 S101 201R AT103

FREQUENCY

125Hz 250Hz 400Hz 500Hz 750Hz 1kHz 1.5kHz 2kHz 3kHz 4kHz 6kHz 8kHz

302F 303F 304F 305F 306F 307F 308F 309F 310F 311F 312F 301F

R101 12.9K R103 6.49K R105 4.01K R107 3.21K R109 2.15K R111 1.61K R113 1.07K R115 803 R117 536 R119 402 R121 267 R142 200

202F 203F 204F 205F 206F 207F 208F 209F 210F 211F 212F 201F

R102 12.9K R104 6.49K R106 4.01K R108 3.21K R110 2.15K R112 1.61K R114 1.07K R116 803 R118 536 R120 402 R122 267 R143 200

102F 103F 104F 105F 106F 107F 108F 109F 110F 111F 112F 101F

FOR 1311-AU

Rotary switch sections are shown as viewed from the panel end of the shaft. The first digit of the contact number refers to the section. The section nearest the panel is 1, the next section back is 2, etc. The next two digits refer to the contact. Contact 01 is the first position clockwise from a strut screw (usually the screw above the locating key), and the other contacts are numbered sequentially (02, 03, 04, etc), proceeding clockwise around the section. A suffix F or R indicates that the contact is on the front or rear of the section, respectively.

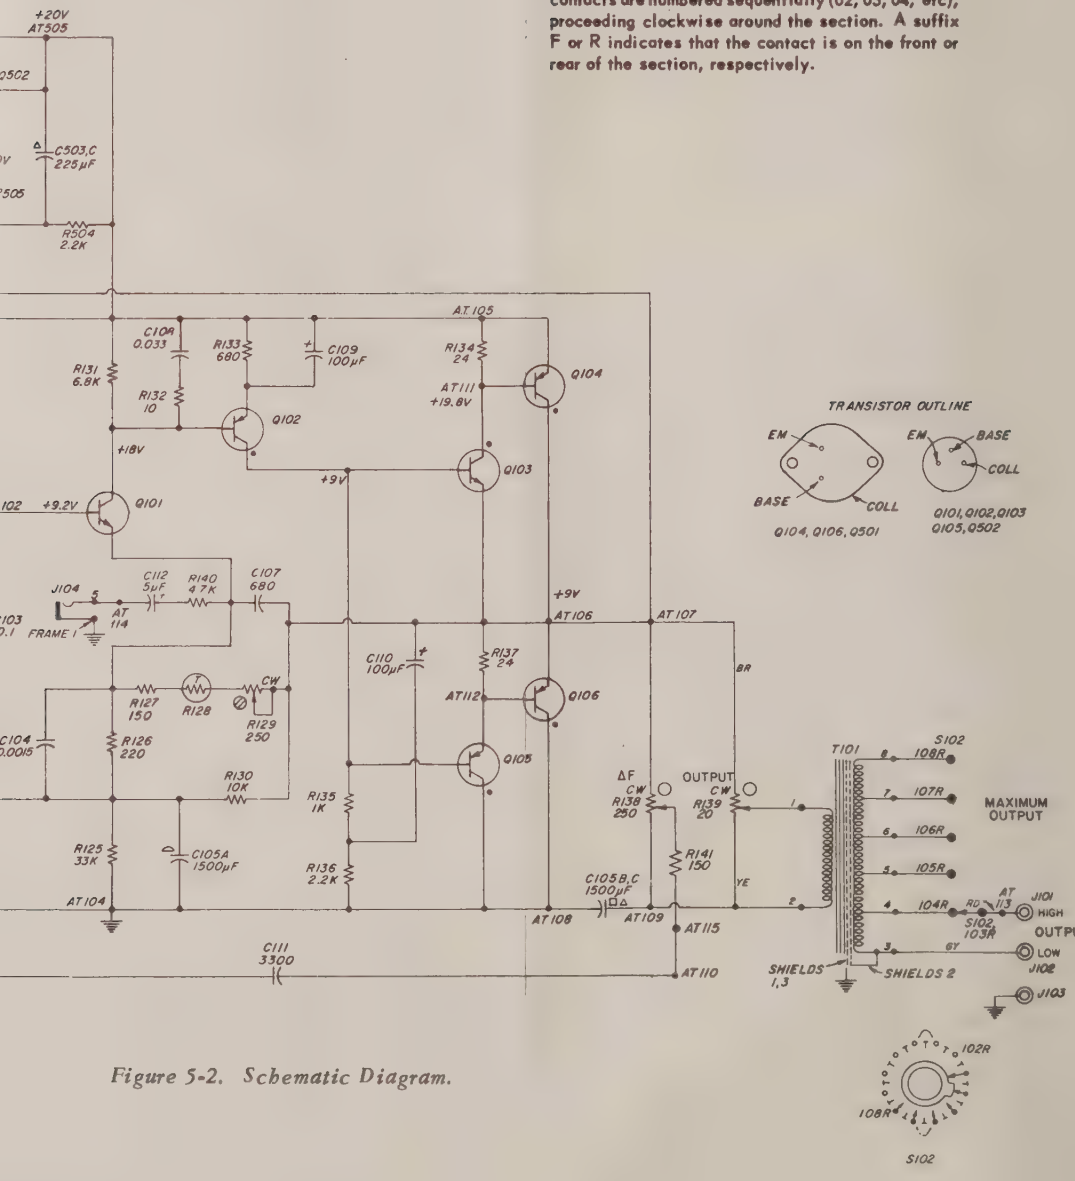

Figure 5-2. Schematic Diagram.

PARTS LIST

REF NO	DESCRIPTION	PART NO
CAPACITORS		
C101	Plastic, 0.1μF ±1% 100 V	4860-8249
C102	Electrolytic, 100μF 15 V	4450-2800
C103	Plastic, 0.1μF ±1% 100 V	4860-8249
C104	Ceramic, 0.0015μF ±10% 500 V	4406-2158
C105A	Electrolytic, 1500μF 15 V	4450-0700
C105B,C	Electrolytic, 1500μF 25 V	4450-0700
C106	Ceramic, 0.0022μF ±10%	4406-2228
C107	Ceramic, 680pF ±20% 500 V	4404-1689
C108	Plastic, 0.033μF ±10% 100 V	4860-7865
C109	Electrolytic, 100μF 15 V	4450-2800
C110	Electrolytic, 100μF 15 V	4450-2800
C111	Mica, 3300pF ±10%	4570-1333
C112	Electrolytic, 5μF +100-10% 50 V	4406-2339
C501	Ceramic, 0.0033μF ±20% 500 V	4406-2339
C502	Ceramic, 0.0033μF ±20% 500 V	4450-4000
C503A	450μF 100 V	
C503B	Electrolytic, 225μF 100 V	4450-3900
C503C	225μF 100 V	
RESISTORS		
R101	Film, 32.1 kΩ ±1% 1/2 W	6450-2321
R102	Film, 32.1 kΩ ±1% 1/2 W	6450-2321
R103	Film, 26.8 kΩ ±1% 1/2 W	6450-2268
R104	Film, 26.8 kΩ ±1% 1/2 W	6450-2268
R105	Film, 16.1 kΩ ±1% 1/2 W	6450-2161
R106	Film, 16.1 kΩ ±1% 1/2 W	6450-2161
R107	Film, 13.4 kΩ ±1% 1/2 W	6450-2134
R108	Film, 13.4 kΩ ±1% 1/2 W	6450-2134
R109	Film, 8.03 kΩ ±1% 1/2 W	6450-1803
R110	Film, 8.03 kΩ ±1% 1/2 W	6450-1803
R111	Film, 4.01 kΩ ±1% 1/2 W	6450-1401
R112	Film, 4.01 kΩ ±1% 1/2 W	6450-1401
R113	Film, 3.21 kΩ ±1% 1/2 W	6450-1321
R114	Film, 3.21 kΩ ±1% 1/2 W	6450-1321
R115	Film, 1.61 kΩ ±1% 1/2 W	6450-1161
R116	Film, 1.61 kΩ ±1% 1/2 W	6450-1161
R117	Film, 803 Ω ±1% 1/2 W	6450-0803
R118	Film, 803 Ω ±1% 1/2 W	6450-0803
R119	Film, 321 Ω ±1% 1/2 W	6450-0321
R120	Film, 321 Ω ±1% 1/2 W	6450-0321
R121	Film, 161 Ω ±1% 1/2 W	6450-0161
*R122	Film, 161 Ω ±1% 1/2 W	6450-0161
R101	Film, 12.9 kΩ ±1% 1/2 W	6450-2129
R102	Film, 12.9 kΩ ±1% 1/2 W	6450-2129
R103	Film, 6.49 kΩ ±1% 1/2 W	6450-1649
R104	Film, 6.49 kΩ ±1% 1/2 W	6450-1649
R105	Film, 4.01 kΩ ±1% 1/2 W	6450-1401
R106	Film, 4.01 kΩ ±1% 1/2 W	6450-1401
R107	Film, 3.21 kΩ ±1% 1/2 W	6450-1321
R108	Film, 3.21 kΩ ±1% 1/2 W	6450-1321
R109	Film, 2.15 kΩ ±1% 1/2 W	6450-1215
R110	Film, 2.15 kΩ ±1% 1/2 W	6450-1215
R111	Film, 1.61 kΩ ±1% 1/2 W	6450-1161
R112	Film, 1.61 kΩ ±1% 1/2 W	6450-1161
R113	Film, 1.07 kΩ ±1% 1/2 W	6450-1107
R114	Film, 1.07 kΩ ±1% 1/2 W	6450-1107
R115	Film, 803 Ω ±1% 1/2 W	6450-0803
R116	Film, 803 Ω ±1% 1/2 W	6450-0803
R117	Film, 536 Ω ±1% 1/2 W	6450-0536
R118	Film, 536 Ω ±1% 1/2 W	6450-0536
R119	Film, 402 Ω ±1% 1/2 W	6450-0402

REF NO	DESCRIPTION
R120	Film, 402 Ω ±1% 1/2 W
R121	Film, 267 Ω ±1% 1/2 W
R122	Film, 267 Ω ±1% 1/2 W
R142	Film, 200 Ω ±1% 1/2 W
**R143	Film, 200 Ω ±1% 1/2 W
R123	Composition, 11 kΩ ±5% 1/2 W
R124	Composition, 10 kΩ ±5% 1/2 W
R125	Composition, 33 kΩ ±5% 1/2 W
R126	Composition, 220 Ω ±5% 1/2 W
R127	Composition, 150 Ω ±5% 1/2 W
R128	Thermistor, 30 kΩ ±25%
R129	Potentiometer, carbon, 250 Ω ±20%
R130	Composition, 10 kΩ ±5% 1/2 W
R131	Composition, 6.8 kΩ ±5% 1/2 W
R132	Composition, 10 Ω ±5% 1/2 W
R133	Composition, 680 Ω ±5% 1/2 W
R134	Composition, 24 Ω ±5% 1/2 W
R135	Composition, 1 kΩ ±5% 1/2 W
R136	Composition, 2.2 kΩ ±5% 1/2 W
R137	Composition, 24 Ω ±5% 1/2 W
R138	Potentiometer, Carbon, 250 Ω ±10%
R139	Potentiometer, Wire-wound, 20 Ω ±5
R140	Composition, 4.7 kΩ ±5% 1/2 W
R141	Composition, 150 Ω ±5% 1/2 W
R501	Wire-wound, 6.8 Ω ±10% 2 W
R502	Composition, 47 Ω ±5% 1/2 W
R503	Composition, 2.2 kΩ ±5% 1/2 W
R504	Composition, 2.2 kΩ ±5% 1/2 W
MISCELLANEOUS	
CR501 thru CR504	DIODE, 1N3253
CR505	DIODE, 1N969B, 22-V ±5% Zener
F501	FUSE, Slow-blow, 0.125 Amp (230V)
F502	FUSE, Slow-blow, 0.125 Amp (230V)
F501	FUSE, Slow-blow, 0.25 Amp (115V)
F502	FUSE, Slow-blow, 0.25 Amp (115V)
J101	JACK, Binding post, insulated
J102	JACK, Binding post, insulated
J103	JACK, Binding post, insulated
J104	JACK, Phone
PL501	PLUG, Power
P501	PILOT LIGHT, (Mazda #44)
S101	SWITCH, Wafer
S102	SWITCH, Wafer
S501	SWITCH, Toggle
T101	TRANSFORMER, Output
T501	TRANSFORMER, Power
Q101	TRANSISTOR, 2N1304
Q102	TRANSISTOR, 2N1305
Q103	TRANSISTOR, 2N1304
Q104	TRANSISTOR, 2N176
Q105	TRANSISTOR, 2N1305
Q106	TRANSISTOR, 2N176
Q501	TRANSISTOR, 2N176
Q502	TRANSISTOR, 2N1304
	KNOB, ΔF Control
	KNOB, OUTPUT LEVEL Control
	KNOB, FREQUENCY Switch
	KNOB, OUTPUT Switch
	ETCHED-BOARD ASSEMBLY

PART NO	
6450-0402	*For Type 1311-A.
6450-0267	
6450-0267	**For Type 1311-AU.
6450-0200	
6450-0200	
6100-3115	
6100-3105	
6100-3335	
6100-1225	
6100-1155	
6740-1402	
6040-0200	
6100-3105	
6100-2685	
6100-0105	
6100-1685	
6100-0245	
6100-2105	
6100-2225	
6100-0245	
6000-0100	
0971-3905	
6100-2475	
6100-1155	
6760-9689	
6100-0475	
6100-2225	
6100-2225	
6081-1001	
6083-1058	
5330-0450	
5330-0450	
5330-0700	
5330-0700	
0938-3000	
0938-3000	
0938-3022	
4260-1230	
4240-0600	
5600-0700	
7890-3100	
7890-3110	
7910-1300	
0745-4250	
0745-4240	
8210-1304	
8210-1305	
8210-1304	
8210-1760	
8210-1305	
8210-1760	
8210-1760	
8210-1304	
5530-0400	
5530-0400	
5530-1200	
5500-1700	
1311-2701	

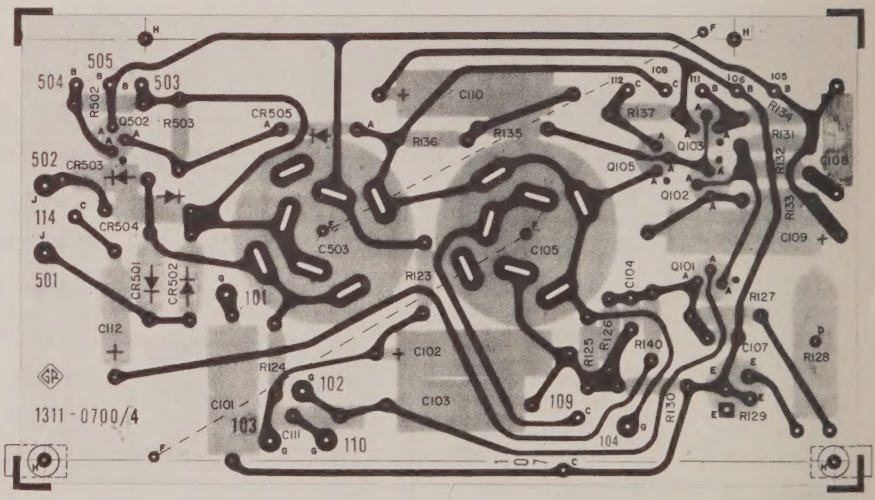

Figure 5-5. Etched circuit board.

NOTE: The number appearing on the foil side is not the part number. The dot on the foil at the transistor socket indicates the collector lead.

GENERAL RADIO COMPANY

WEST CONCORD, MASSACHUSETTS 01781

617 369-4400 617 646-7400

SALES ENGINEERING OFFICES

METROPOLITAN NEW YORK*

845 Broad Avenue
Ridgefield, New Jersey 07657
Telephone N.Y. 212 964-2722
N.J. 201 943-3140

SYRACUSE

Pickard Building
East Molloy Road
Syracuse, New York 13211
Telephone 315 454-9323

NEW ENGLAND*

22 Baker Avenue
West Concord, Massachusetts 01781
Telephone 617 646-0550

PHILADELPHIA

Fort Washington Industrial Park
Fort Washington, Pennsylvania 19034
Telephone 215 646-8030

WASHINGTON* AND BALTIMORE

11420 Rockville Pike
Rockville, Maryland 20852
Telephone 301 946-1600

ORLANDO

113 East Colonial Drive
Orlando, Florida 32801
Telephone 305 425-4671

* Repair services are available at these district offices.

CHICAGO*

9440 W. Foster Avenue
Chicago, Illinois 60656
312 992-0800

CLEVELAND

5579 Pearl Road
Cleveland, Ohio 44129
Telephone 216 886-0150

LOS ANGELES*

1000 North Seward Street
Los Angeles, California 90038
Telephone 213 469-6201

SAN FRANCISCO

626 San Antonio Road
Mountain View, California 94040
Telephone 415 948-8233

DALLAS*

2600 Stemmons Freeway, Suite 210
Dallas, Texas 75207
Telephone 214 637-2240

TORONTO*

99 Floral Parkway
Toronto 15, Ontario, Canada
Telephone 416 247-2171

NTREAL

1255 Laird Boulevard
Town of Mount Royal, Quebec, Canada
Telephone 514 737-3673
WA Telephone 613 233-4237

www.manualsplus.com

1019597

General Radio Company (Overseas), 8008 Zurich, Switzerland
General Radio Company (U.K.) Limited, Bourne End, Buckinghamshire, England
Representatives in Principal Overseas Countries

Printed in USA